











 
 



 
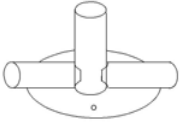 
 


 
## 6m -2.3 PARTY TENT SEMI PRO, CombiTent

Description		Part No.	6x6	6x8	6x10	6x12	6x14
Pipe 50-50		1	16	20	24	28	32
Pipe 38-38		2	23	30	37	44	51
Pipe 38-38 with hole		3-1	2	2	2	2	2
		3-2	2	2	2	2	2
Horizontal Gable bar		4	8	10	12	14	16
Vertical Gable bar		5	4	5	6	7	8
Pipe 25-25 diagonal pipe		6	4	4	4	4	4
Leg pipe 50-50 with holes		7	4	6	8	10	12
Corner leg pipe 50-50 with holes and a hole		8	4	4	4	4	4
connector Three way 110 °54-42		10	4	4	4	4	4







## 6m -2.3 PARTY TENT SEMI PRO, CombiTent

Description		Part No.	6x6	6x8	6x10	6x12	6x14
connector Three way 140 °54-42		11	2	2	2	2	2
connector four way 140 °54-42		12	2	3	4	5	6
connector four way 110 °54-42		13	4	6	8	10	12
Cross piece 54-42		14	4	6	8	10	12
T-piece 54-42		15	4	4	4	4	4
Connector three way –foot for the corners 54-42		16	2	2	2	2	2

 


 
 
## 6m -2.3 PARTY TENT SEMI PRO, CombiTent

Description		Part No.	6x6	6x8	6x10	6x12	6x14
Connector three way –foot for the corners 54-42		17	2	2	2	2	2
Connector three way –foot for the sidewalls 54-42		18	4	6	8	10	12
Connector three way –foot for the endwalls 54-42		19	4	4	4	4	4
Super peg		20	4	6	8	10	10
Spiral peg		21	4	4	4	4	4
Groundpeg 6x300mm		22	8	10	12	14	16


 
## 6m -2.3 PARTY TENT SEMI PRO, CombiTent

Description		Part No.	6x6	6x8	6x10	6x12	6x14
Groundpeg 4x180mm		23	36	42	48	54	60
Screw M8X50mm		24	58	72	86	100	114
Screw M8X60mm		25	52	64	76	88	100
Locknuts M8		26	110	136	162	188	214
Wing nut M6		29	16	20	24	28	32
Screw M6X25mm		30	16	20	24	28	32

## 6m -2.3 PARTY TENT SEMI PRO, CombiTent

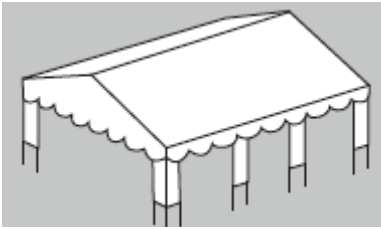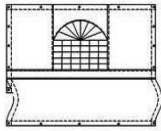Description		Part No.	6x6	6x8	6x10	6x12	6x14
spanner		31	2	2	2	2	2
Long bungeeball		33	112	132	152	172	192
rope		35	4	4	4	4	4
roof		37	1	1 (3 sections)	1 (4 sections)	1 (4 sections)	1 (5 sections)
sidewall		38	6	8	10	12	14

 
## 6m -2.3 PARTY TENT SEMI PRO, CombiTent

Description		Part No.	6x6	6x8	6x10	6x12	6x14
endwall with large door		39	1	1	1	1	1
endwall with small door		40	1	1	1	1	1

## 6m -2.3 PARTY TENT SEMI PRO, CombiTent

 
I

Select a flat surface for the tent.  
Unpack the boxes and check if all listed parts are included. Assemble the roof frame by mounting parts 10-15 on the pipes (Parts 1, 2 and 3). Use the screws to firmly attach the parts.

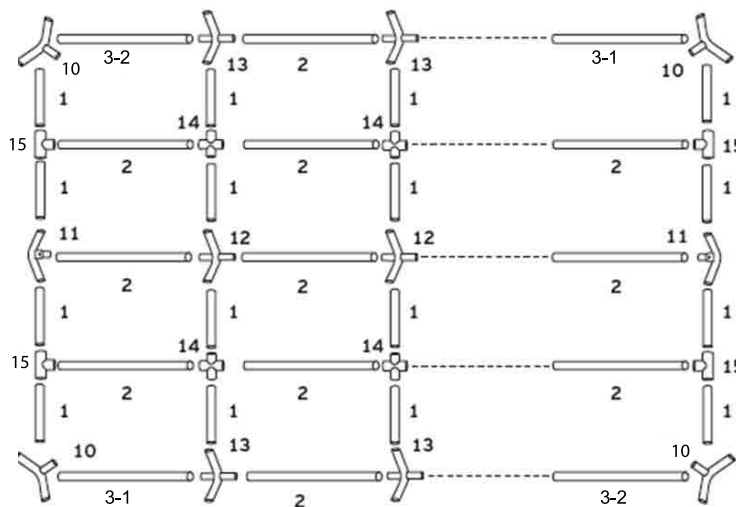

II

 
Attach the gable bars (part 4 and 5) using screws (30) and wing nuts (29).

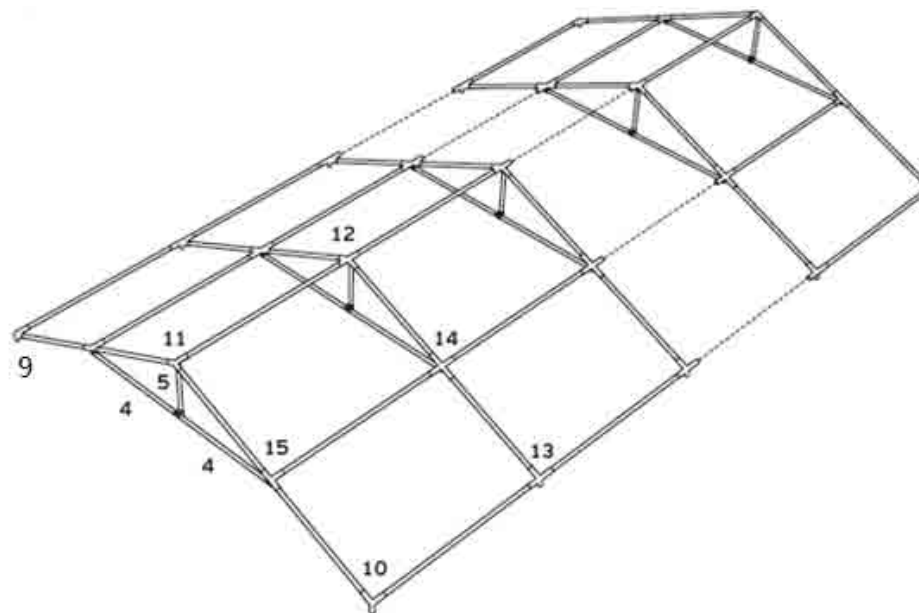

## 6m -2.3 PARTY TENT SEMI PRO, CombiTent

 
### III

Lift one side of the tent frame and attach the legs(7). Attach the legs with part no. 8 to the outside in all four corners. Place the roof onto the frame and use the bungees to fasten it. Be sure not to put too much tension on the bungees in order not to make attaching the other side more difficult.

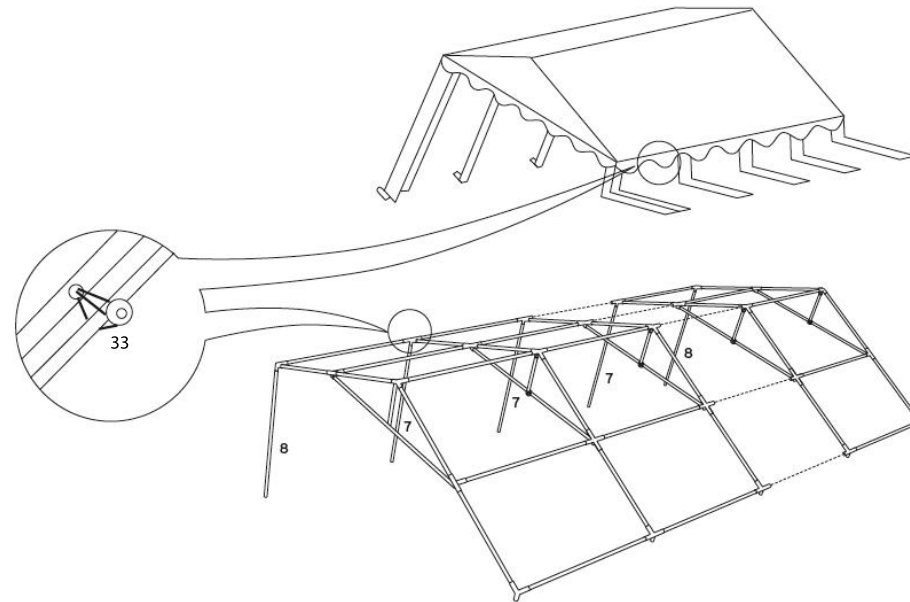

### IV

Attach the legs on the other side and install the feet(16,17,18,19) at the bottom. Use the long ground pegs to fasten the feet to the ground. Reinforce the side frame by attaching the diagonal pipes(6) to all four corners. Complete the bottom frame with the required pipes(2) and connectors (16,17,18,19).

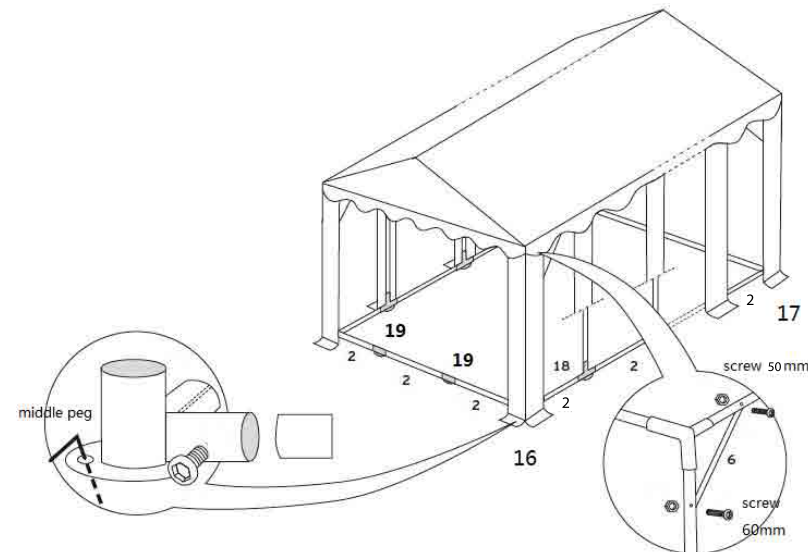



## 6m -2.3 PARTY TENT SEMI PRO, CombiTent

V

Attach the sidewalls to the frame using the bungees.

Attach the endwall directly to the roof with velcro.

Connect the leg covers to the sidewalls and endwalls with velcro as shown.

Use the short ground pegs to fasten the endwalls to the ground.

The guy rope runs from every corner of the tent and is braced to the ground using the spiral pegs.

The super pegs provide the tent with additional tension and stability

